



VOCA AutoLoc™ Lens Interchange Instructions


TYPE 2:
Full Rim Interchange

VIDEO:
Scan this page with the free
Layar app to see AutoLoc in
action. [Layar](#)

VOCA WORLD HEADQUARTERS
510 COMMERCE PARK DRIVE SE
MARIETTA, GA 30060 | USA


INFO@VOCAEYEWEAR.COM

800.966.2020

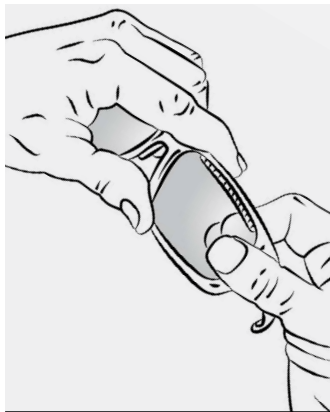


STEP 1: REMOVAL

Hold frame as shown with thumb on nose bridge. With the other hand, grasp lens at outside edge between fingers and thumb as shown.

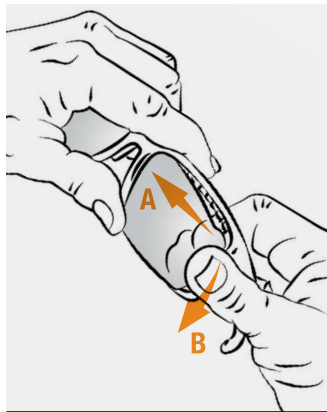


STEP 2: REMOVAL

A) Push lens slightly toward nose/center to disengage AutoLoc **B)** while lifting the lens toward the front and out of the frame.

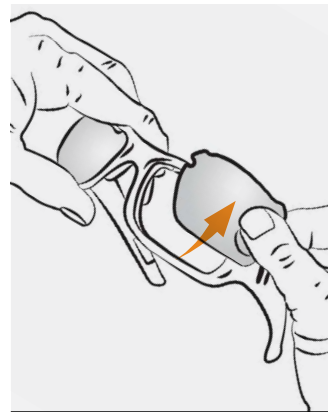


STEP 3: REMOVAL

Gently remove lens.

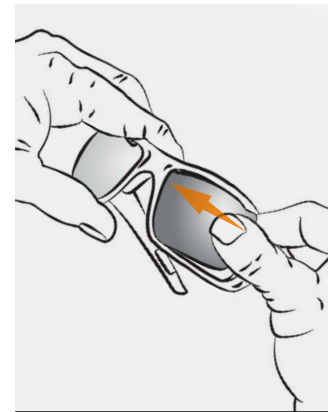

STEP 4: INSTALLATION

Insert the nose tab of the lens in the lens groove at the nose as shown and rest the lens on the top of eyerim.

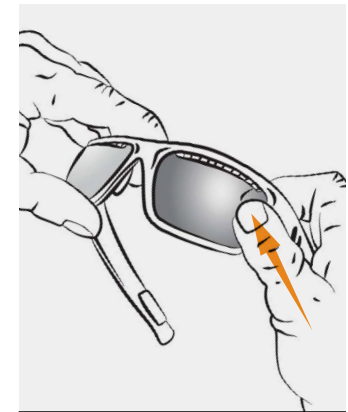

STEP 5: INSTALLATION

With your thumb, gently press the outer edge of the lens down and into lens groove as shown. ●